



# HP Elitebook 6930p Battery Removal

How to remove the battery in the HP Elitebook 6930p, 6735b, 6730b, or 6530b.

Written By: Richdave



## INTRODUCTION

You will learn how to replace the battery.

---



### PARTS:

- [HP EliteBook 6930p, 6735b, 6730b, 6530b Replacement Laptop Battery](#) (1)
-

## Step 1 — Battery Removal



- Flip laptop over and locate the battery release button
- Push release button to the left to release battery and gently pull battery from the laptop

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 06:14:37 AM.